

## IMPORTANT

The materials have been packaged with the utmost care to avoid breakage. Please contact us as soon as possible if you find anything damaged or missing so that we can make it right and get you on your way to your new door.

## PACKAGE CONTENTS

1. Instruction pamphlet
2. Door appliqué
3. Adhesive(s)

## NECESSARY TOOLS AND MATERIALS

1. Interior door
2. Sawhorses or other support
3. Pencil
4. Straightedge or ruler
5. Measuring tape
6. Paint and/or stain
7. Caulking gun (optional)
8. Hand saw (optional)
9. Caulk (optional)

# ASSEMBLY INSTRUCTIONS

## INTERIOR DOOR KIT



Make it MID\*CENTURY, LLC 2017

## FINISHING YOUR KIT

**ASSEMBLE:** Kits arrive in two or more pieces along with the attachment materials that are needed to create the assembly. Please see the dimension sheet provided with these instructions for additional information about assembling the parts before proceeding.

**PREP:** Kits arrive bare, ready for application of a finish. Start by finding a supportive, horizontal surface on which to lay your kit while finishing. Be sure to follow manufacturers' warnings regarding ventilation and personal protection if using products that emit hazardous fumes. Note: While each kit receives a preliminary sanding before packaging, you may wish to sand your appliqué further per the manufacturer's recommendations for your chosen finishing method.

**APPLY:** Following the manufacturer's instructions, apply your chosen finish to one

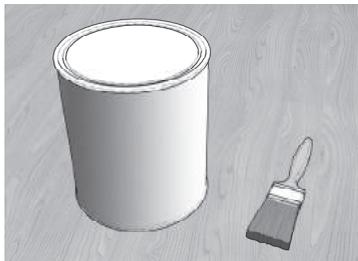


FIGURE 1

side and the edges of the kit. Based on manufacturer's recommendations, you may need to sand and apply the finish in several layers to achieve the desired finish level. For additional tips and tricks, please access our Pinterest page where you will find information on several finishing techniques.

## METHOD OF ASSEMBLY

**PREP:** Start by laying your interior door on a horizontal surface. The surface should be level enough that the appliqué (once glue is applied) does not slide. For previously painted or stained doors, rough up the area where the appliqué will sit with fine sandpaper. You do not need to remove the finish to bare wood, but enough to provide the adhesive some tooth to grip.

**DRAW:** Following the dimensions provided with these instructions, draw light guidelines in pencil to assist you in accurately placing the appliqué. Once you have your guidelines drawn, lay the appliqué on the lines to confirm a match. Adjust if necessary.

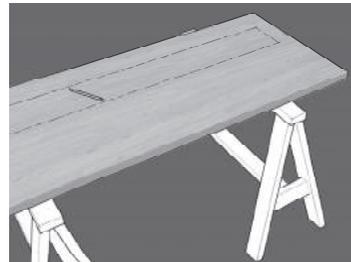


FIGURE 2

**APPLY:** Using the included adhesive, apply it to the back of the appliqué. Use care not to use too much or too little adhesive based on the size of the appliqué section. You may wish to spread some of the adhesive using a putty knife, spatula or plastic card to cover larger areas on the back of your appliqué.

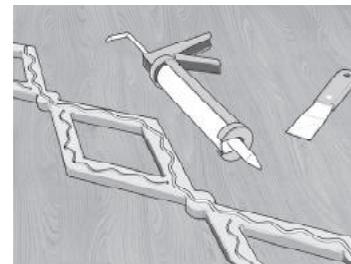


FIGURE 3

**FASTEN:** Using your pencil guides, flip your appliqué over (glue side down) and carefully place it on your door. You may wish to have a second set of hands for this step. While you can adjust

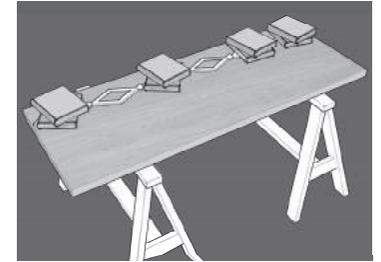


FIGURE 4

the appliqué location within the working time for the adhesive, it is best to locate the appliqué as accurately as possible. Once you have the appliqué placed, wipe off any errant adhesive from the door before it sets. Last, using clamps or other weights (books, lumber, etc.) weigh down the appliqué during the drying period as specified by the manufacturer.

**OPTIONAL:** You may wish to apply caulk to the edge of the kit where it meets the door. Tip: Choose caulk based on what finish was applied and only apply the caulk after the finish has sufficiently dried.

